


Ventilation system

Blowers

Required installation accessories

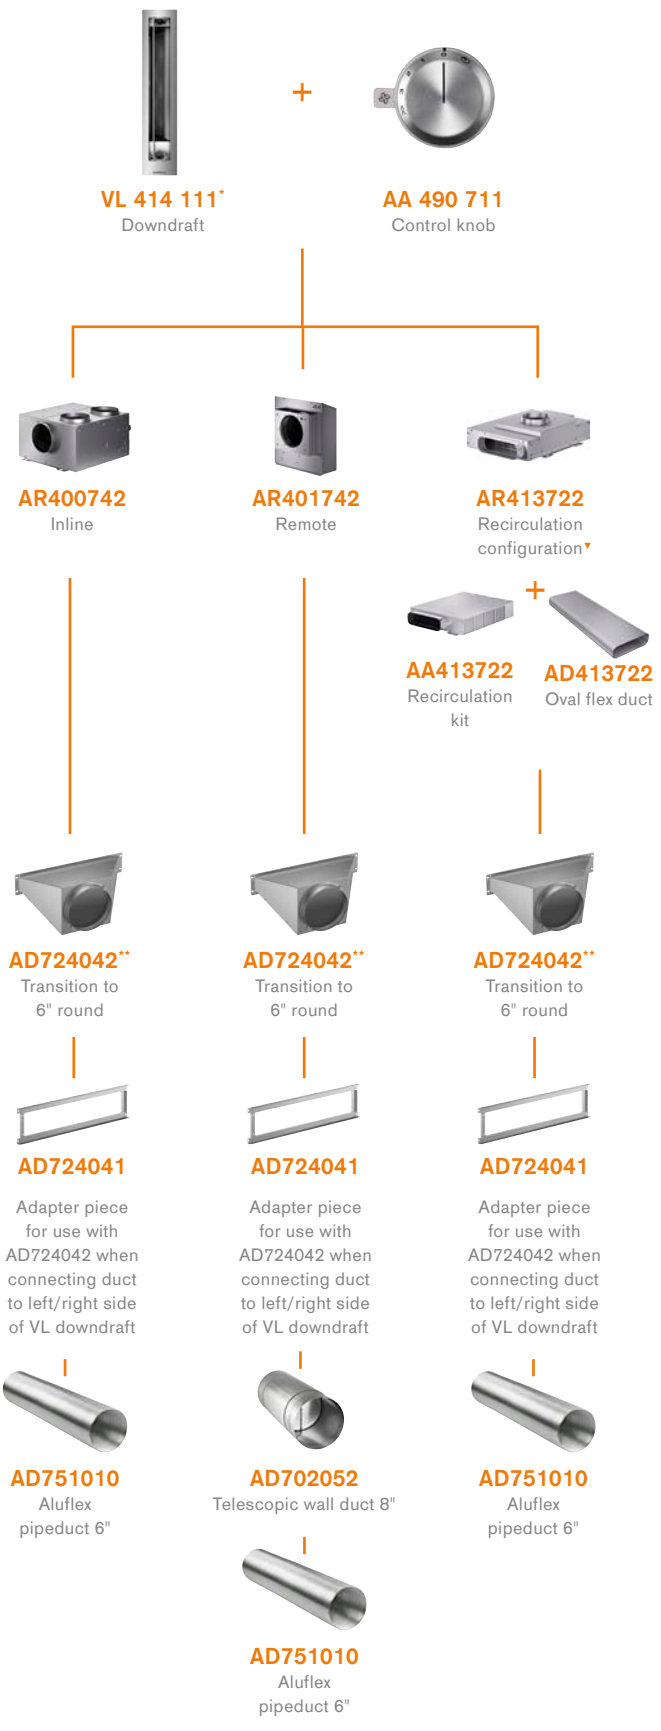

\* For recirculation operation, order AR413722 + AA413722 + AD413722.  
 \* When connecting two or more VL downdrafts, it is recommended to have one blower per VL downdraft.  
 \*\* AD724042 transitions when venting straight down.