

Dishwasher cut-out combinations for standard dishwashers (without flexible hinge)

When under-counter height of 32 3/16" to 34 9/16" always plan a Euro tub dishwasher, regardless of the toe kick height.


When under-counter height of 34 1/8" to 36 1/2" always plan a Tall tub dishwasher, regardless of the toe kick height.

When under-counter height of 34 3/16" to 34 7/16" please note: Whether to plan a Euro tub or Tall tub dishwasher depends on the toe kick height.

For dishwasher with remaining time projection, the maximum toe-kick height must be reduced by 1 3/16" (30 mm) to provide an optimal display.

		Under-counter cabinet height 25 13/16"–28 9/16" (655–725)										Under-counter cabinet height 27 3/4"–30 1/2" (705–775)			
		Cut-out height in inches (mm) →													
		32 3/16 (815)	32 1/2 (825)	32 7/8 (835)	33 1/4 (845)	33 11/16 (855)	34 1/16 (865)	34 7/16 (875)	34 13/16 (885)	35 1/4 (895)	35 5/8 (905)	36 (915)	36 7/16 (925)		
Toe kick height in inches (mm) ↓	<3 9/16 (90)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	3 9/16 (90)	E	E (S/D)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	3 15/16 (100)	E	E	E (S/D)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	4 5/16 (110)	E	E	E	E (S/D)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	4 3/4 (120)	E	E	E	E	E (S/D)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	5 1/8 (130)	E	E	E	E	E	E (S/D)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	5 1/2 (140)	E	E	E	E	E	E	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	5 7/8 (150)	E	E	E	E	E	E	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	6 5/16 (160)	E	E	E	E	E	E	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	6 11/16 (170)		E	E	E	E	E	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)	E (S)
	7 1/16 (180)			E	E	E	E	E	E	E	E	E	E	E	E
	7 1/2 (190)				E	E	E	E	E	E	E	E	E	E	E
	7 7/8 (200)					E	E	E	E	E	E	E	E	E	E
	8 1/4 (210)							E	E	E	E	E	E	E	E
	8 11/16 (220)								E	E	E	E	E	E	E

E = Euro Tub dishwasher DF 480/DF 250, (S) = special solution
 T = Tall Tub dishwasher DF 481/DF 251, (S) = special solution
 (S) = special solution with folding hinge (DA 021 000) / divided kitchen cabinet door
 (D) = special solution with 3/8" gap from the countertop → Spacer batten / child lock not possible

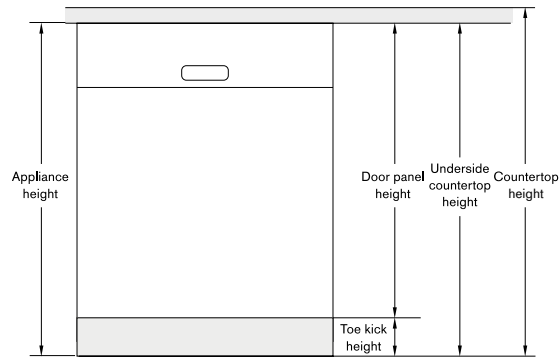

Installation chart for door panel DA 231

Undercounter

The door panels cannot be used with dishwashers with flexible hinge.

The door panel is continuously variable for height over a range of 2".

		Under-counter cabinet height 26 3/8"–28 3/8" (670–720)										Under-counter cabinet height 28 3/8"–30 5/16" (720–770)			
		Cut-out height in inches (mm) →													
		32 3/16 (815)	32 1/2 (825)	32 7/8 (835)	33 1/4 (845)	33 11/16 (855)	34 1/16 (865)	34 7/16 (875)	34 13/16 (885)	35 1/4 (895)	35 5/8 (905)	36 (915)	36 7/16 (925)		
Toe kick height in inches (mm) ↓	3 3/4 (95)	E													
	4 1/8 (105)	E	E												
	4 1/2 (115)	E	E	E											
	4 15/16 (125)	E	E	E	E										
	5 5/16 (135)	E	E	E	E	E									
	5 11/16 (145)	E	E	E	E	E	E								
	6 1/8 (155)		E	E	E	E	E	E							
	6 1/2 (165)			E	E	E	E	E	E						
	6 7/8 (175)				E	E	E	E	E	E					
	7 5/16 (185)					E	E	E	E	E	E				
	7 11/16 (195)						E	E	E	E	E				
	8 1/16 (205)							E	E	E	E				
8 7/16 (215)															
8 7/8 (225)															

E = Euro Tub dishwasher DF 250 160, door panels DA 231 010
 T = Tall Tub dishwasher DF 251 160, door panels DA 231 110

